

TS0804



ABC 1	DEF 2	GHI 3
JKL 4	MNO 5	RPQ 6
STU 7	VWX 8	YZ- 9
* NEXT OFF	.-& 0	# ENTER ON

CZFM

+	●
-	●
D+	●
D-	●
COMMS	●
IN	●
OUT	●

PWR

ADDRESS	T	A	B	C
■	■	■	■	■
SW1	SW2			
■	■	■	■	■

●	●	●	●
●	●	●	●
●	●	●	●
●	●	●	●
●	●	●	●
●	●	●	●
●	●	●	●
●	●	●	●
●	●	●	●
●	●	●	●

BUZZER

GND-LINK

A terminal block with two pins, labeled 'GND-LINK', located at the bottom center of the panel.